

Beam-mounted pull-out unit
User manual



Symbols



Danger! Risk for injury or death if instructions are not followed



Instructions for proper use

Safety



This instruction must be studied before using or being close to the pull-out unit



Before service or installation of pull-out unit, study installation and inspection manual



Never load a pallet that has a weight greater than capacity stated on label (example below)



Never extract more than one pull-out unit at a time!



Never use a pull-out unit that has visible damage and/or is not working properly



When in doubt, always ask your supervisor or supplier



Normal operation



Load a pallet with a fork lift



Don't load pull-out unit in extended position!



Twist front handle to open lock in inner position



Extract unit and pick components from pallet



Push unit back in and verify so it locks in inner position